


Better Homes & Gardens®

USER GUIDE BETTER HOMES & GARDENS EZRA CHINA CABINET

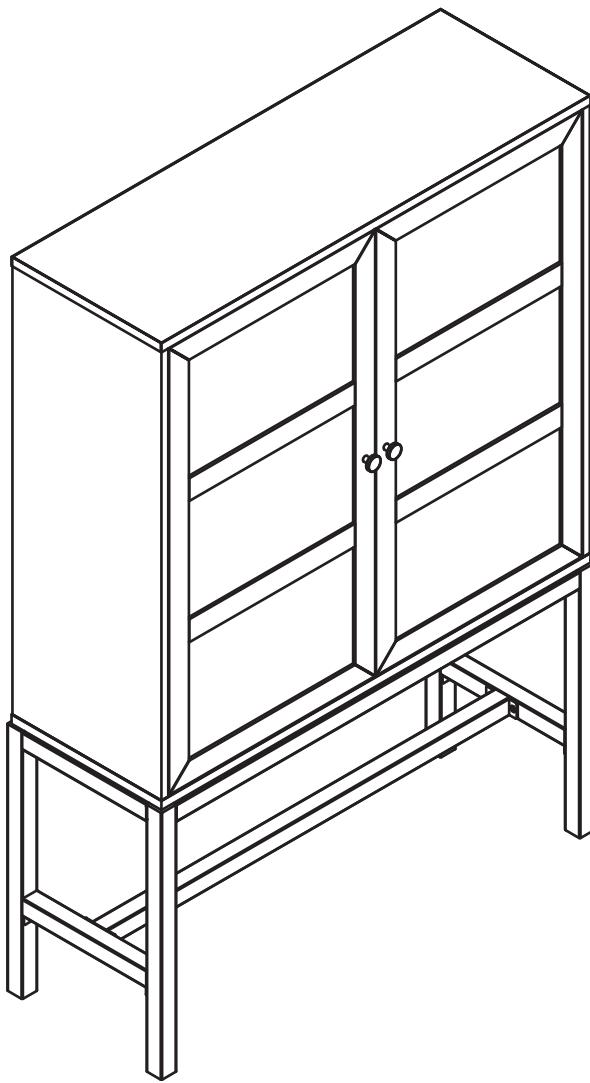

DO NOT RETURN TO THE STORE!

For product assistance &
missing or replacement parts:

WE CAN HELP

1-877-637-3590

Monday - Friday 9:00 am - 5:00 pm EST

THIS GUIDE CONTAINS IMPORTANT SAFETY INFORMATION!

PLEASE READ AND KEEP
FOR FUTURE REFERENCE!

Find more at Walmart.com

Manufactured by Saigon Furniture Company Limited

Model No.:

BH2502125171001 (Light honey) Lot Number : _____
 BH2502125171002 (Black) Date of Purchase : ____ / ____ / ____


Contents & Information

CONTENTS & INFORMATION	2
OVERVIEW	3
SAFETY PRECAUTIONS	4
MODEL DESCRIPTION	5
Setup	5
Tools Needed	5
Hardware	5-6
Tip-over restraint kit	6
Parts List	7
Parts Diagram	7
ASSEMBLY	8-19
CLEANING & CARE	20
WARRANTY	20
SPECIFICATIONS	20
REPLACEMENT PARTS	21-22



FOR ONLINE CUSTOMER SERVICE,
PLEASE SCAN THE QR CODE WITH
YOUR SMARTPHONE.


Overview

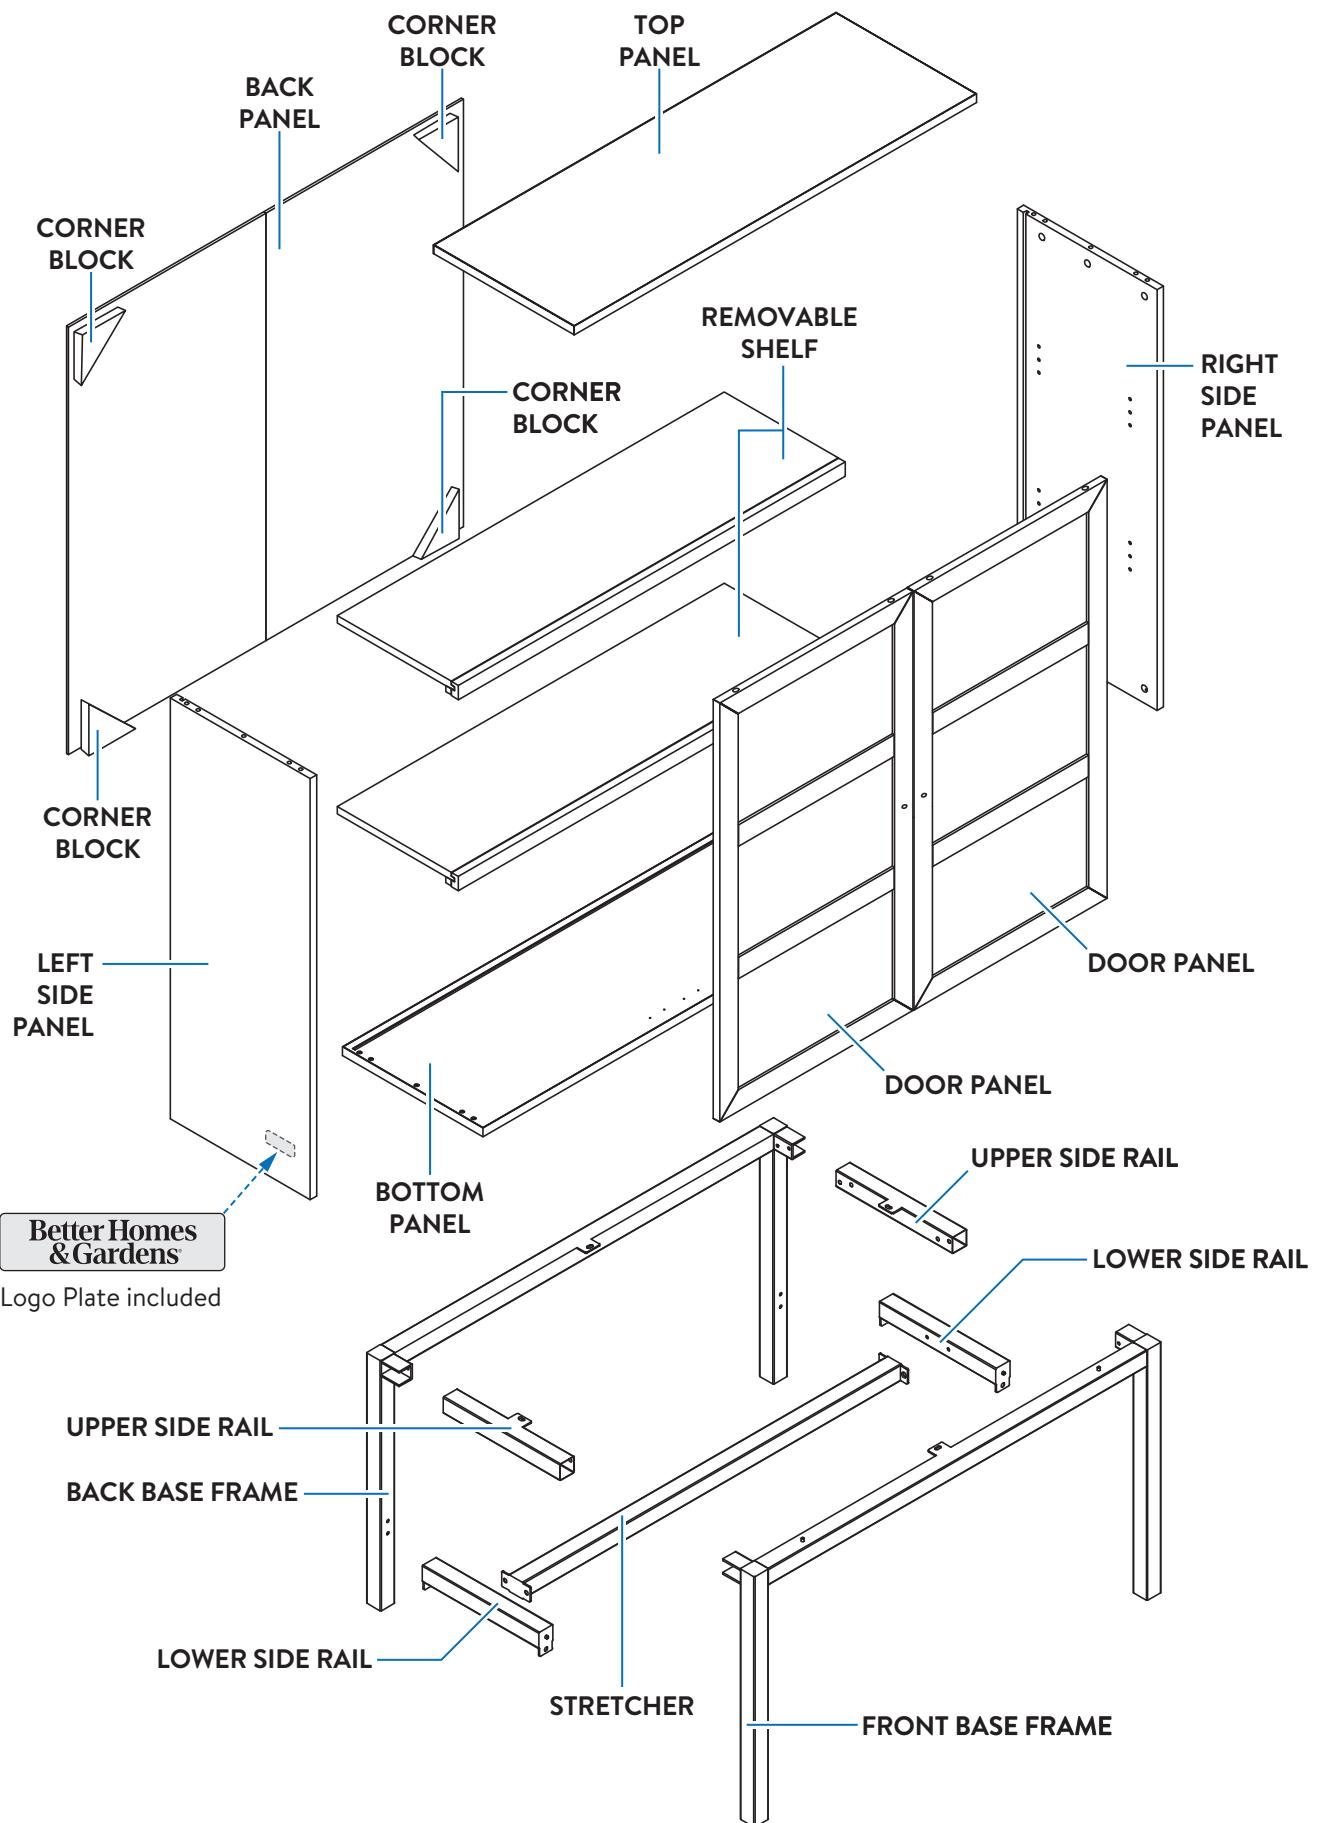

Safety Precautions

⚠ WARNING

The maximum load capacity as listed below may not be exceeded. Exceeding load capacity may result in collapse and possible injury!

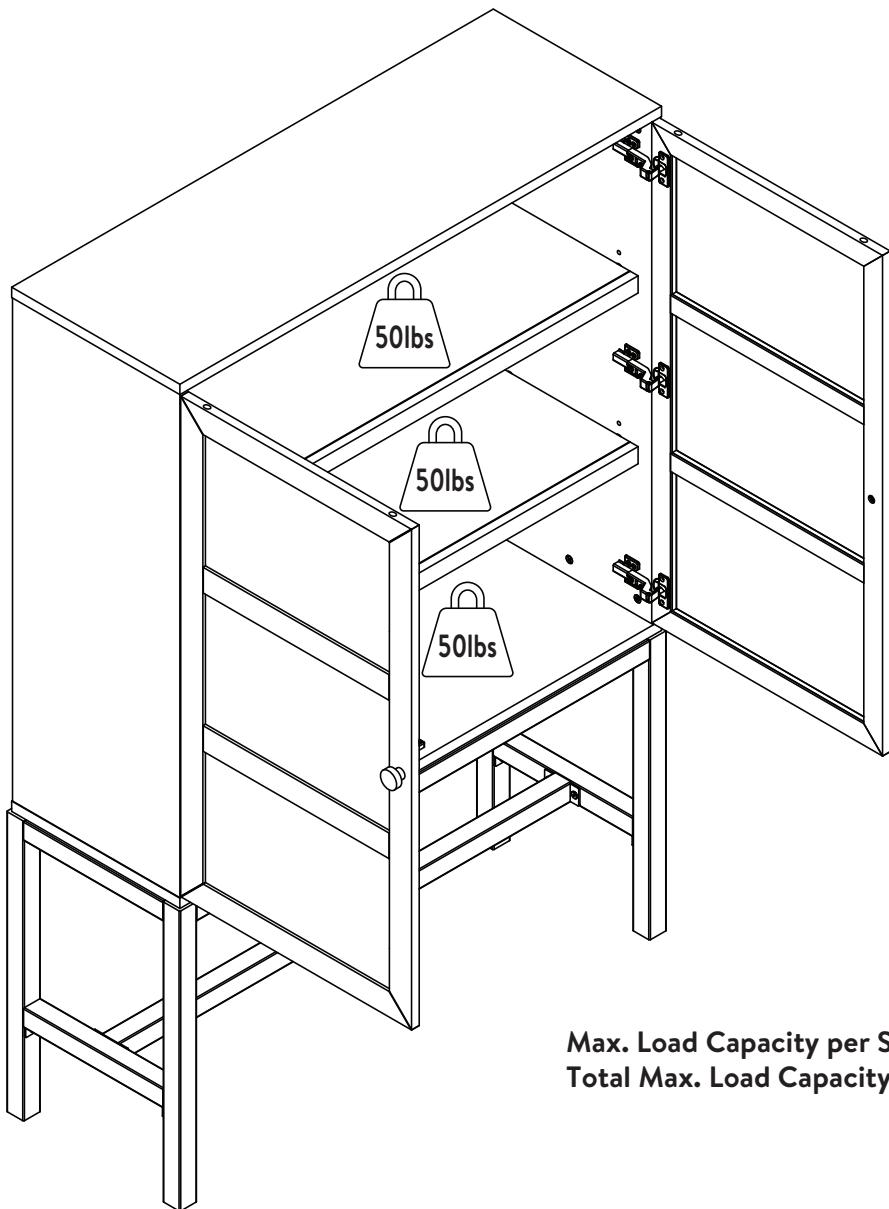

IMPORTANT SAFETY INFORMATION

THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE!

 
- Read and understand all the steps carefully before starting.
- Please follow the steps in the correct orders to avoid difficulties or damages to the parts during assembly. If each step is not followed in the correct order the assembly will be difficult and may result in damages.
- Make sure all the parts are included. Most boards are labeled with a removable sticker.
- Work in a spacious area, preferably on a carpeted surface, near where the unit will be used.
- Please wait until all steps are completed before tightening bolts.
- Please make sure all bolts are tightly fastened before the unit is used.
- **WARNING!:** ALWAYS install Tip-over Restraint Kit (provided) to reduce the risk of furniture tipover.
- Looking for online assembly instructions ? you can access the link:
<https://www.saigon-furniture.com/customer-care>

Model Description


SETUP



(M) M4 Allen Wrench x1
(included)



Phillips Screwdriver
(not included)

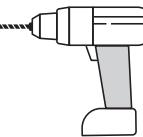


8mm / 5/16" Drill Bit
Electric Drill
used for drilling holes only
(not included)

HARDWARE





Part	Description	Picture	Qty
A	Bolt (M6x15mm)		20
B	Cam Lock Pin		12
C	Wood Dowel		8
D	Magnetic Door Lock		4
E	Screw (M3.5x20mm)		8
F1	Hinge Plate		6
F2	Hinge Arm		6
G	Screw (M4x15mm)		36
H	Cam Lock Nut		12
I	Screw (M4x30mm)		8
J	Shelf Support		8

Model Description

 HARDWARE

Part	Description	Picture	Qty
K	Knob Handle		2
L	Bolt (M4x20mm)		2
M	M4 Allen Wrench		1

   TIP-OVER RESTRAINT KIT

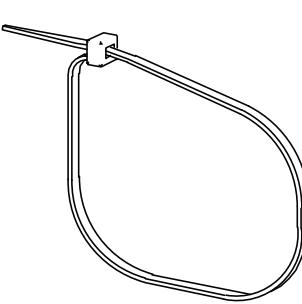Part	Description	Picture	Qty
N	Bracket		4
O	Screw (M4x20mm)		4
P	Wall Plug		4
Q	Screw (M4x40mm)		4
R	Safety Strap		2


Model Description

PARTS LIST

Part	Description	Qty
1	Stretcher	1
2	Lower Side Rail	2
3	Back Base Frame	1
4	Upper Side Rail	2
5	Front Base Frame	1
6	Bottom Panel	1
7	Left Side Panel	1

Part	Description	Qty
8	Right Side Panel	1
9	Top Panel	1
10	Back Panel	1
11	Corner Block	4
12	Removable Shelf	2
13	Door Panel	2

PARTS DIAGRAM

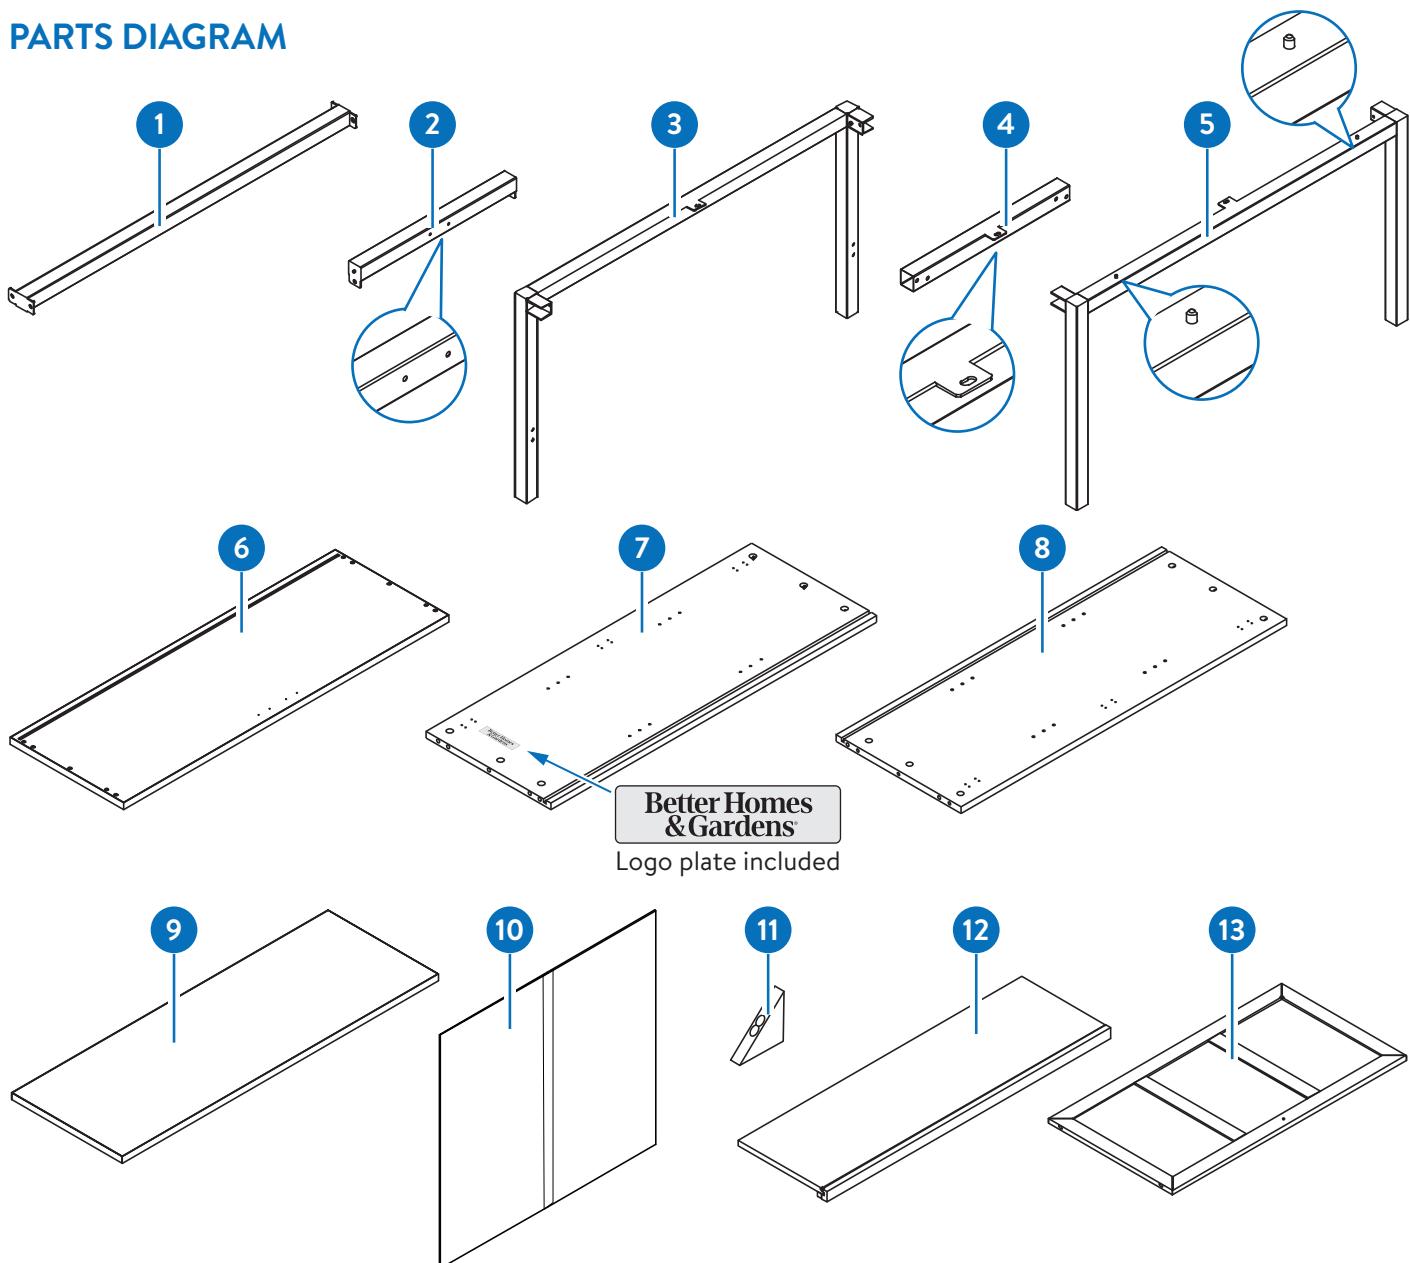

VERIFY THAT ALL PARTS ARE LISTED BEFORE BEGINNING



Assembly

1. ATTACHING THE STRETCHER

1. Attach the **Stretcher (1)** to the **Lower Side Rails (2)** with **Bolts (A)**.
2. Loosely tighten (80 %) the **Bolts** by using **Allen Wrench (M)** (provided).





Do not use power tools to assemble your furniture. Power tools may damage the parts and result in damage.

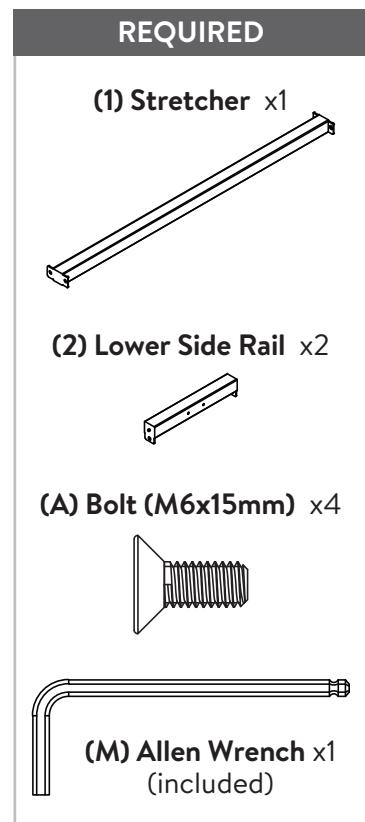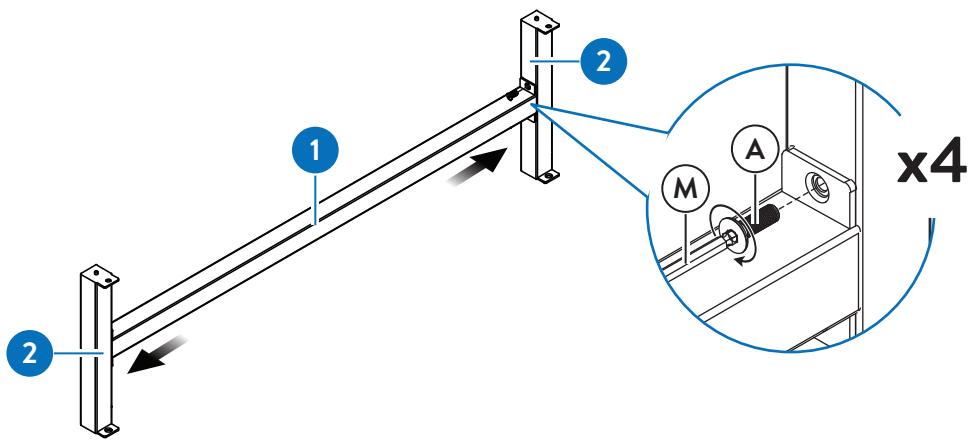

2. ATTACHING THE SIDE RAILS



1. Place the **Back Base Frame (3)** on a clean and soft surface.
2. Attach the **Side Rails (2), (4)** to the **Back Base Frame** with **Bolts (A)**.
3. Loosely tighten (80%) the **Bolts** by using the **Allen Wrench**.

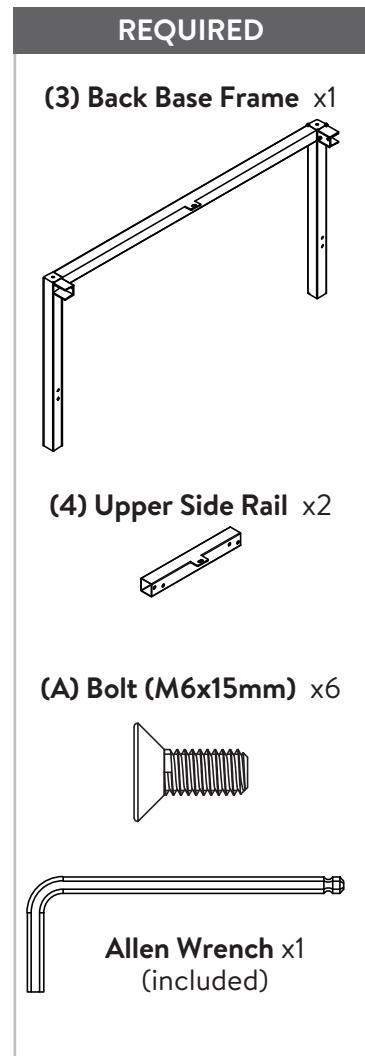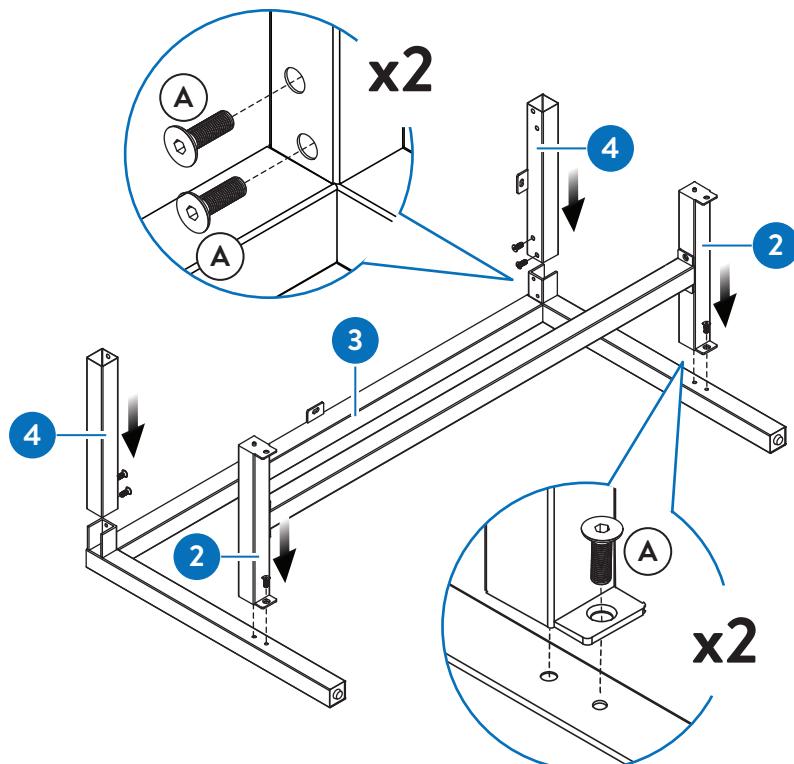

Assembly



3. ATTACHING THE FRONT BASE FRAME

1. Attach the **Front Base Frame (5)** onto the **Side Rails** with **Bolts (A)**.
2. Fully tighten (100%) all the **Bolts** by using the **Allen Wrench**.

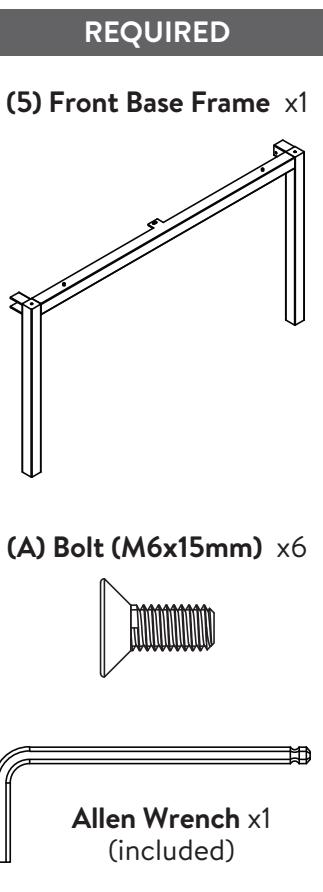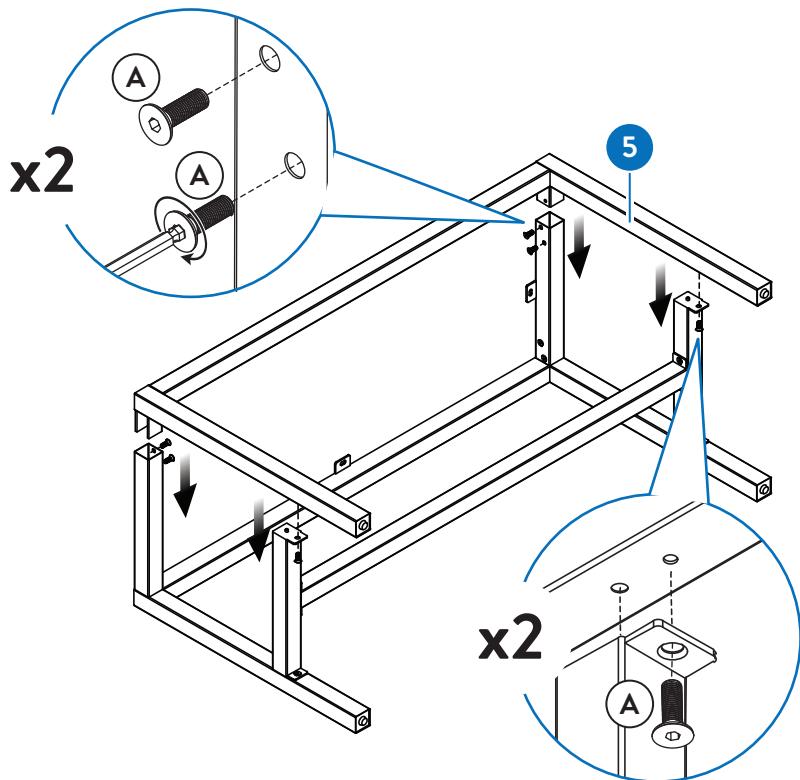

4. ATTACHING THE MAGNETIC DOOR LOCKS, WOOD DOWELS, CAM LOCK PIN ON THE BOTTOM PANEL



1. Insert **Wood Dowels (C)** to the drilled holes of the **Bottom Panel (6)**.
2. Attach **Cam Lock Pins (B)** onto the **Bottom Panel** with a **Phillips Screwdriver** (not provided).
3. Attach **Magnetic Door Locks (D)** onto the **Bottom Panel** with **Screws (E)**. Tighten the **Screws** by using a **Phillips Screwdriver** (not provided).

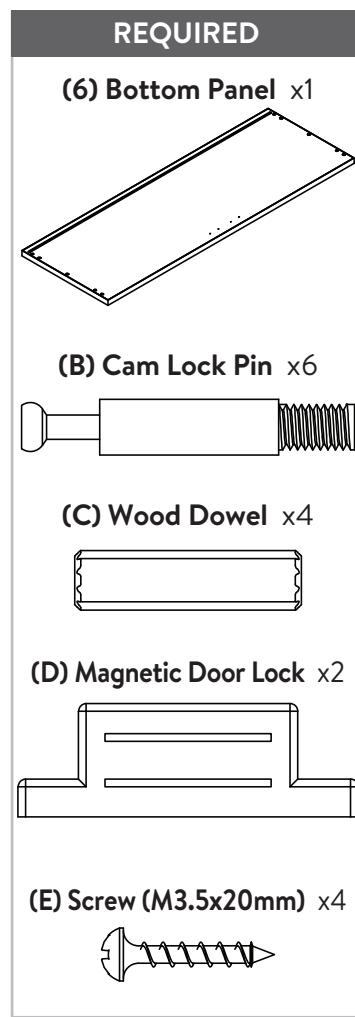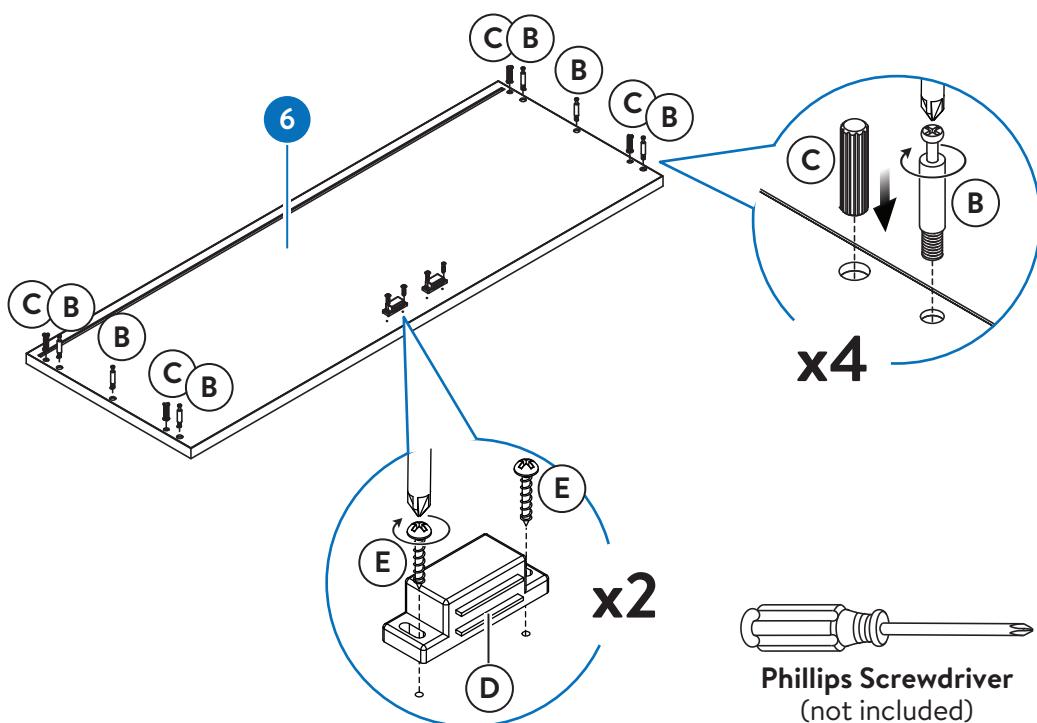

Assembly

5. ATTACHING THE HINGE PLATES

1. Attach **Hinge Plates (F1)** onto the **Side Panels (7), (8)** with **Screws (G)**.
2. Tighten the **Screws** by using the **Phillip Screwdriver**.

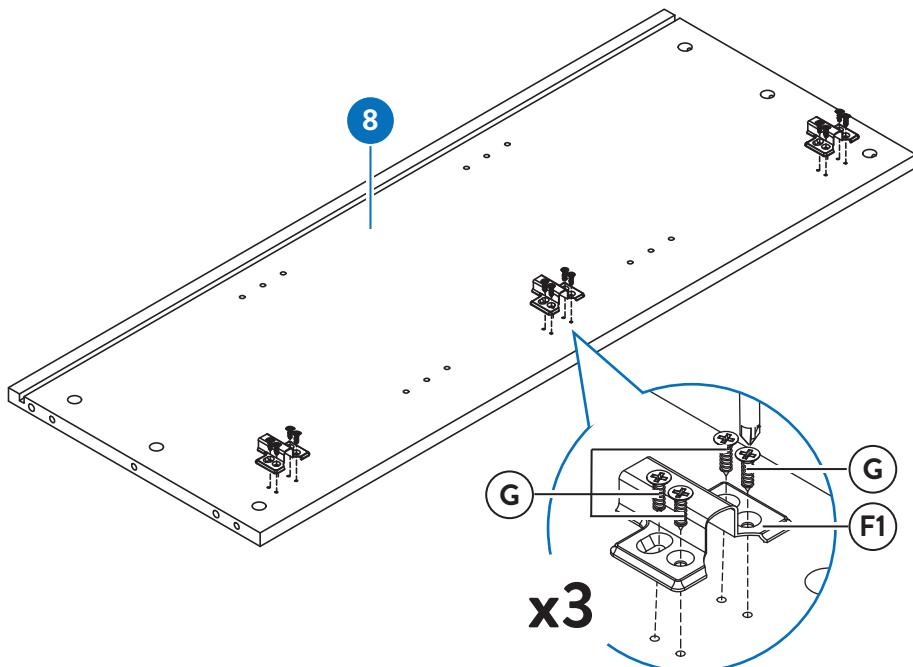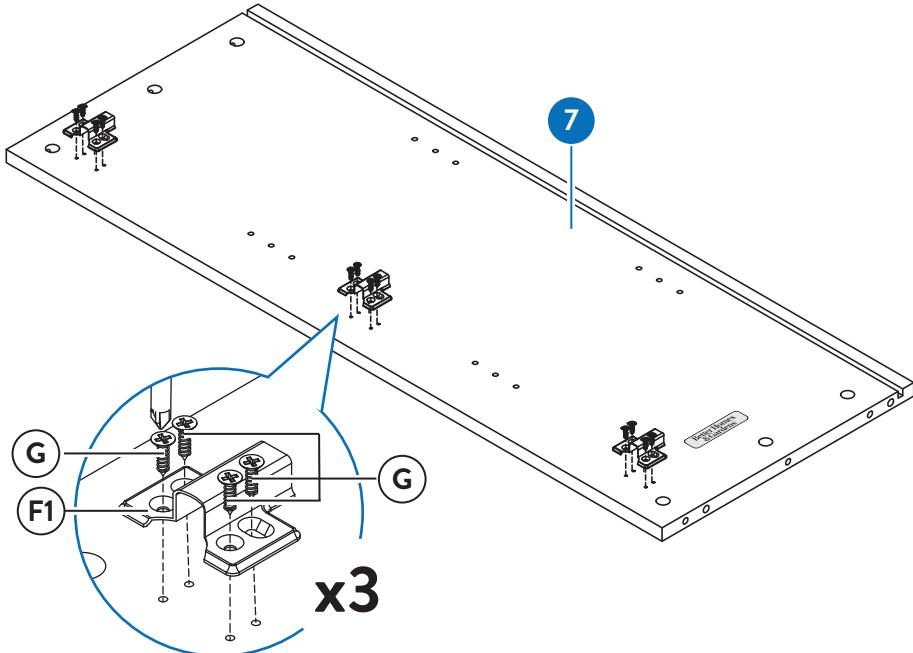


REQUIRED
(7) Left Side Panel x1
(8) Right Side Panel x1
(F1) Hinge Plate x6
(G) Screw (M4x15mm) x24
Phillips Screwdriver (not included)

Assembly

6. ATTACHING THE SIDE PANELS


1. Ask one person for support, carefully align and attach the **Side Panels (7), (8)** to the **Bottom Panel (6)** through **Wood Dowels** and **Cam Lock Pins** as indicated.
2. Tighten the **Cam Lock Nuts (H)** clockwise to lock it in place with the **Phillips Screwdriver**.


TWO PERSON
REQUIRED

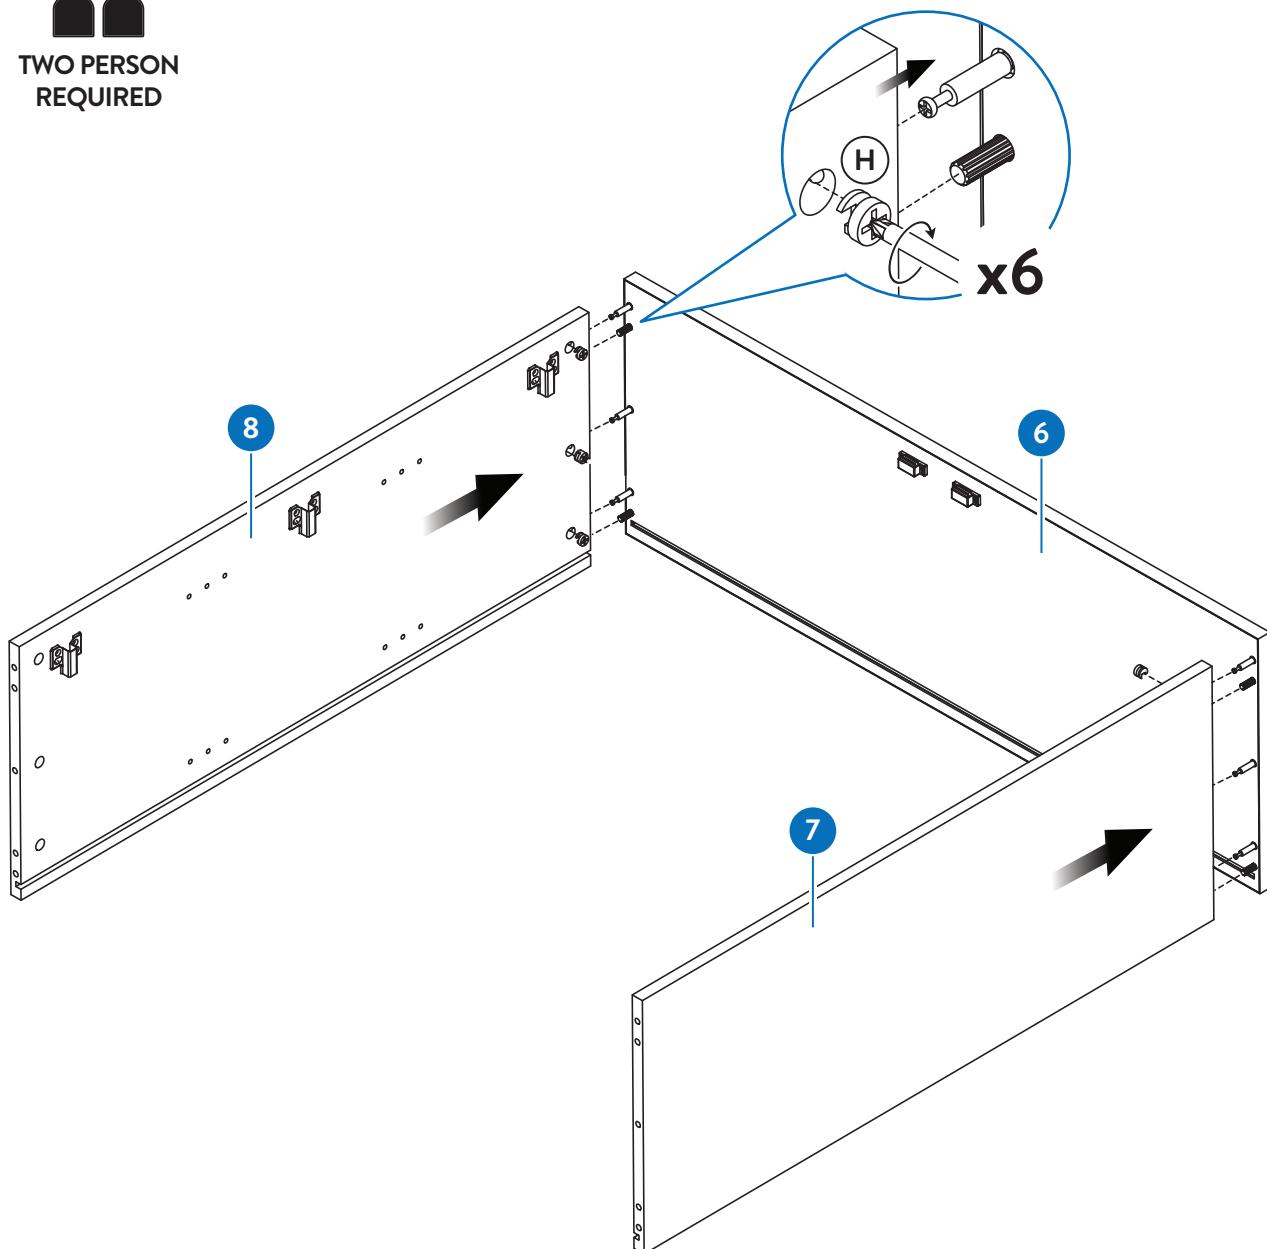

REQUIRED

 (H) Cam Lock Nut x6





Phillips Screwdriver
(not included)

Assembly

7. ATTACHING THE MAGNETIC DOOR LOCKS, CAM LOCK PINS ONTO THE TOP PANEL



1. Place the **Top Panel (9)** upside down on a soft and clean surface.
2. Attach **Cam Lock Pins (B)** onto the **Top Panel** with the **Phillips Screwdriver**.
3. Attach **Magnetic Door Locks (D)** onto the **Top Panel** with **Screws (E)**.
Tighten the **Screws** by using the **Phillips Screwdriver**.

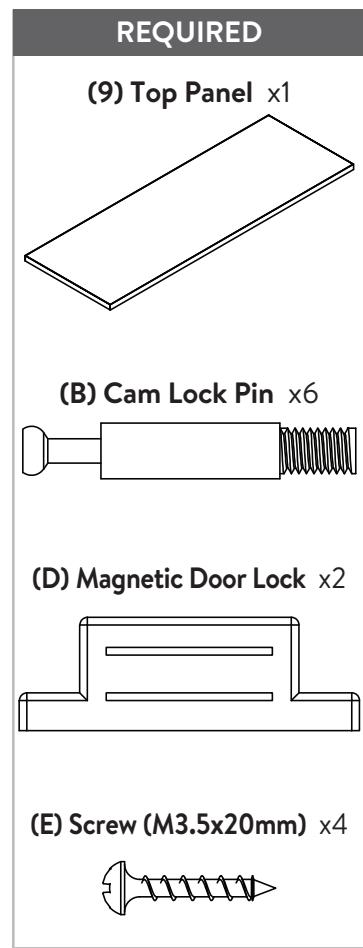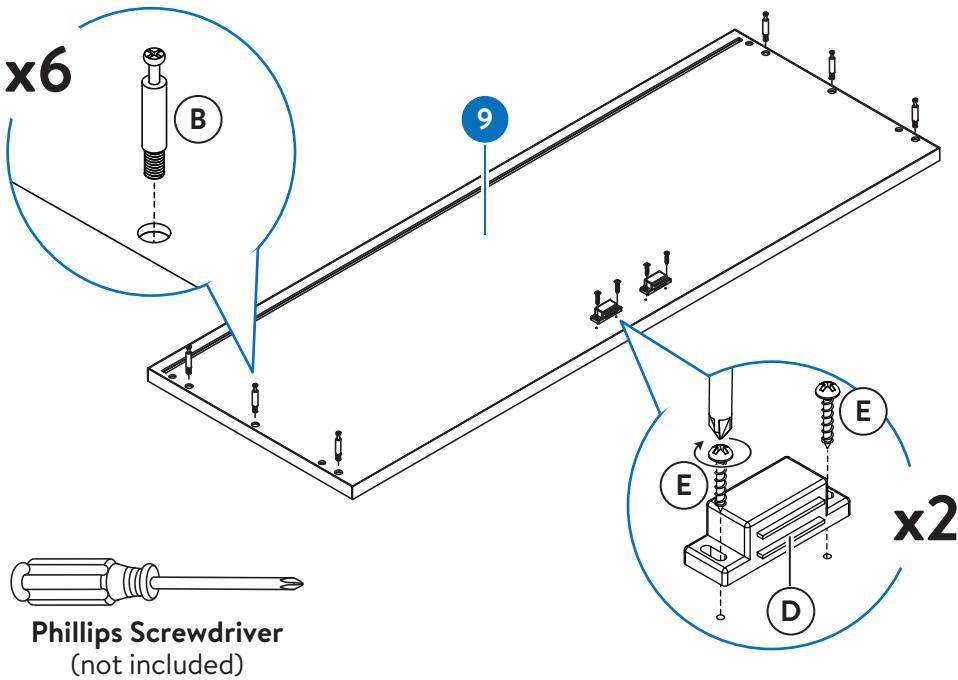

8. ATTACHING THE BACK PANEL

1. Open the two parts of **Back Panel (10)** as indicated.
2. Ask one person for support, carefully insert and slide the **Back Panel** into the slots of two **Side Panels** and **Bottom Panel** as indicated.


TWO PERSON REQUIRED

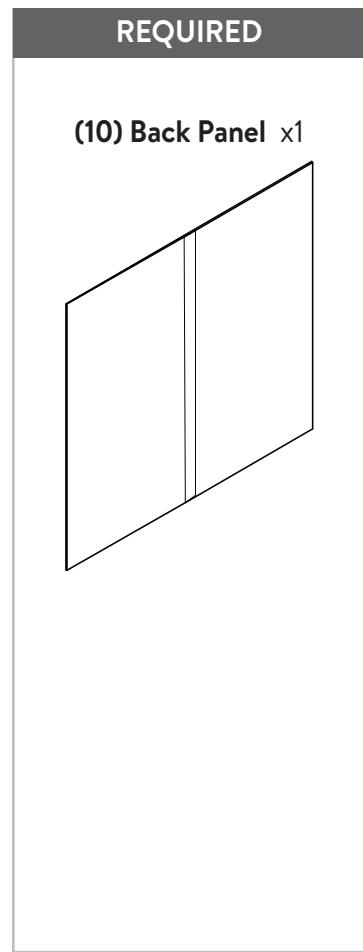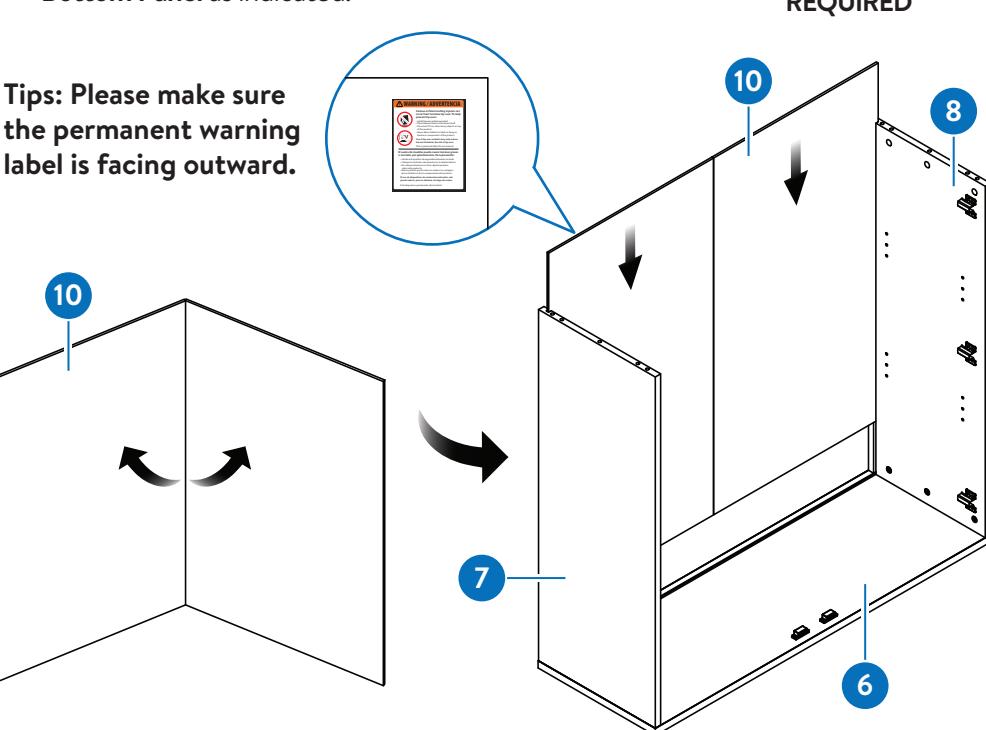

Assembly


9. ATTACHING THE TOP PANEL

1. Insert **Wood Dowels (C)** to the drilled holes of top of both **Side Panels**.
2. Ask one person for support, align and attach the **Top Panel (9)** onto the **Side Panels** through **Wood Dowels** and **Cam Lock Pins**.
3. Tighten the **Cam Lock Nuts** clockwise to lock it in place with the **Phillips Screwdriver**.


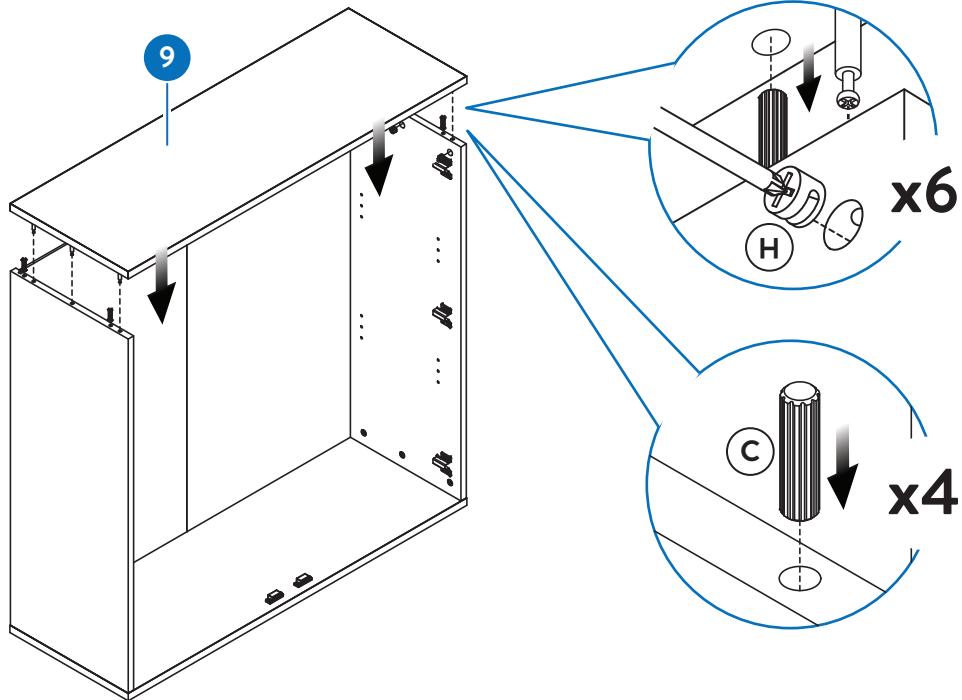


REQUIRED

 (C) Wood Dowel x4



  
(H) Cam Lock Nut x6



Phillips Screwdriver
(not included)


10. ATTACHING THE CORNER BLOCKS

1. Attach the **Corner Blocks (11)** to the four corners of the back of Cabinet with **Screws (I)**.
2. Tighten the **Screws** by using the **Phillips Screwdriver**.

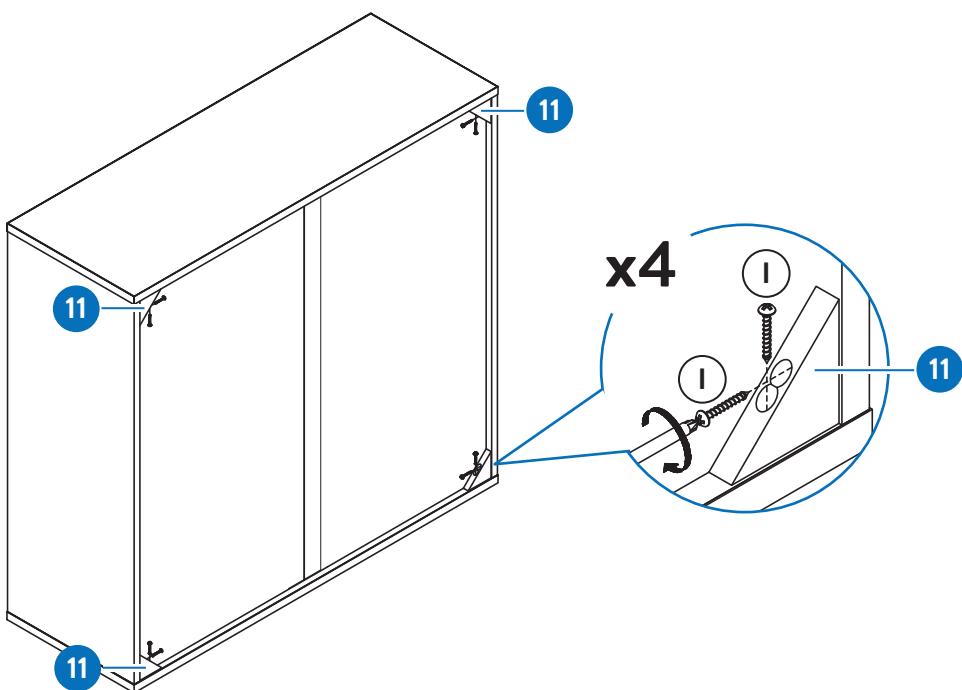


REQUIRED

 (11) Corner Block x4



 (I) Screw (M4x30mm) x8






Phillips Screwdriver
(not included)

Assembly

11. ATTACHING THE CABINET

 1. Ask for support, carefully align and attach the **Cabinet** onto the **Base Frame**.
IMPORTANT ! PIN POSITION MATCHING FIRSTLY, see **Fig. 11A**
2. Secure the **Cabinet** and the **Base Frame** with **Bolts (A)**.
Tighten the **Bolts** by using the **Allen Wrench**, see **Fig. 11B**

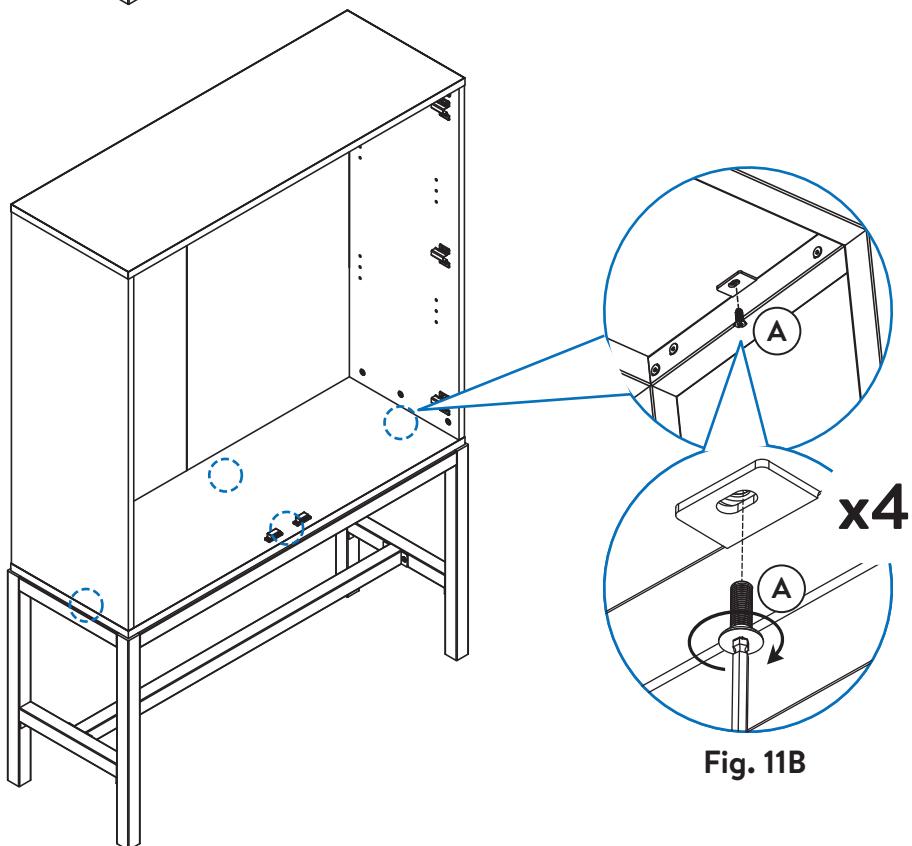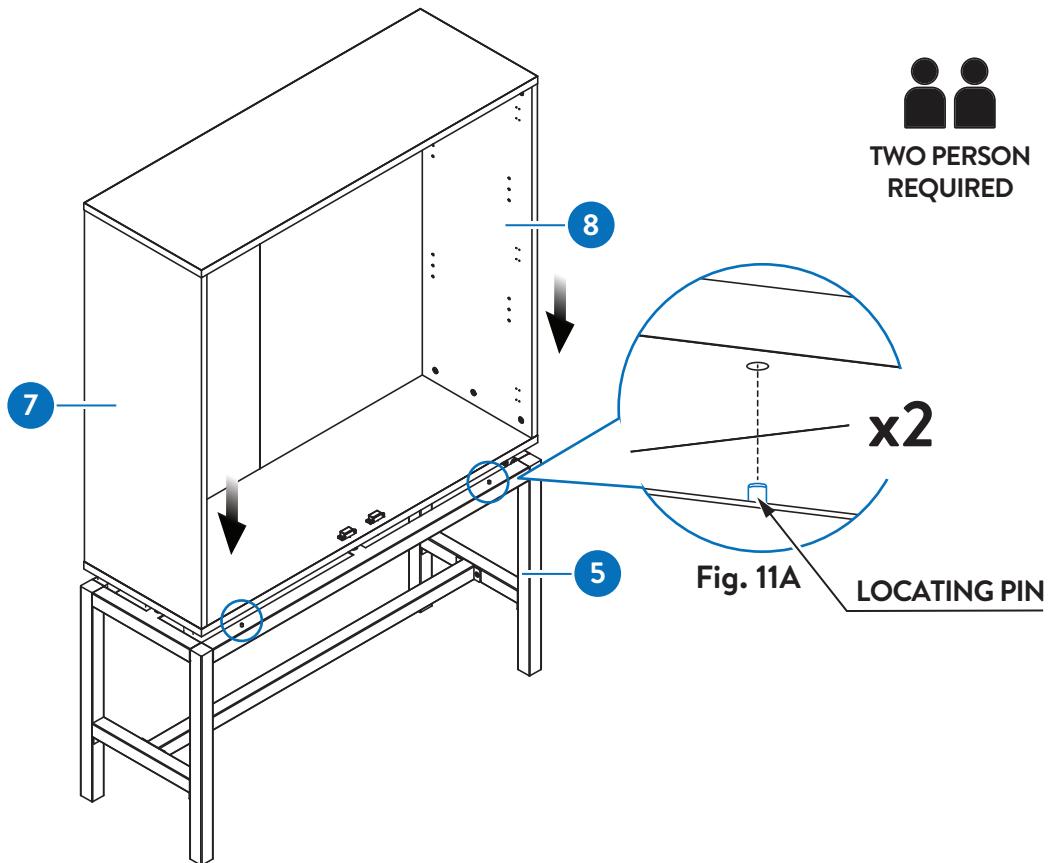


REQUIRED
(A) Bolt (M6x15mm) x4

Allen Wrench x1 (included)

Assembly


12. ATTACHING THE SHELF SUPPORTS

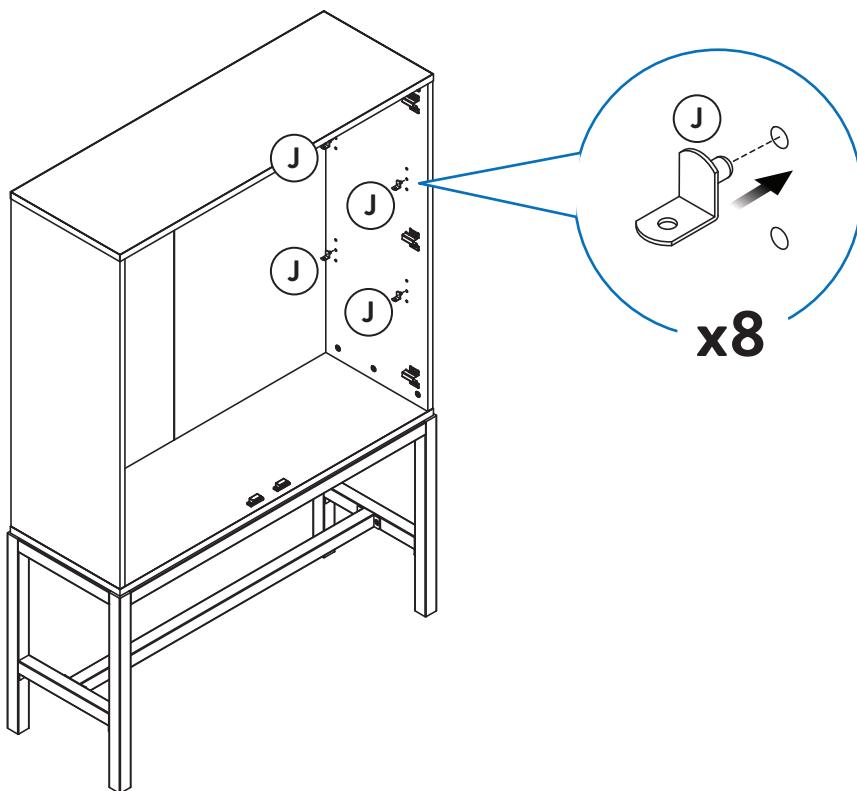Attach the **Shelf Supports (J)** to the drilled holes of both **Side Panels**.




REQUIRED

(J) Shelf Support x8

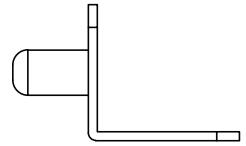


13. PLACING REMOVABLE SHELVES

Place **Removable Shelves (12)** onto the **Shelf Supports** pre-attached of Side Panels.

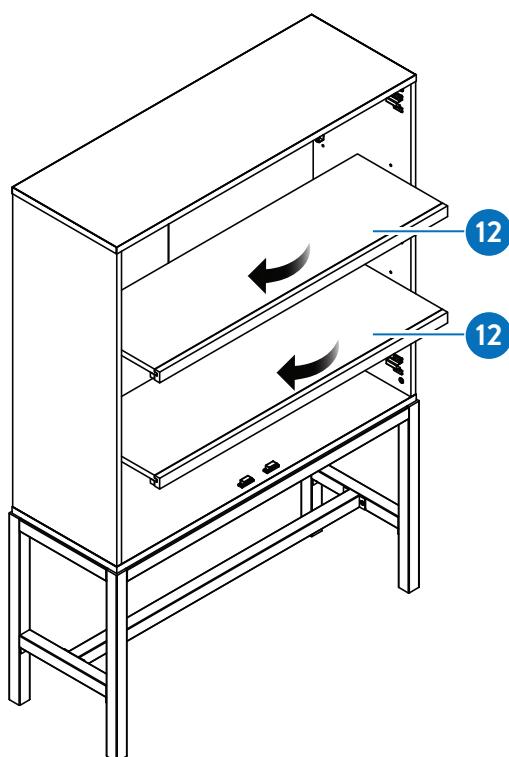

REQUIRED


(12) Removable Shelf x2

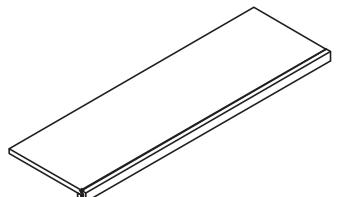

Assembly


14. INSTALLING THE HINGE ARMS

1. Install the **Hinge Arms (F2)** onto the **Door Panels (13)** with **Screws (G)**.
2. Tighten the **Screws** by using the **Phillip Screwdriver**.

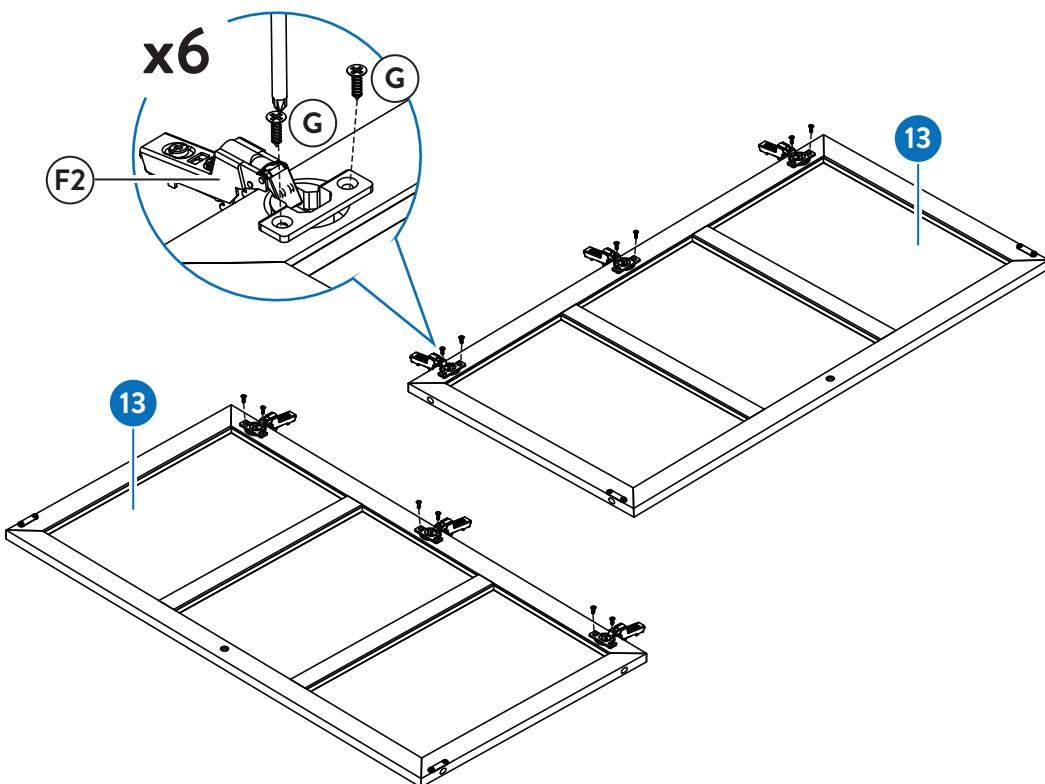


REQUIRED


(13) Door Panel x2

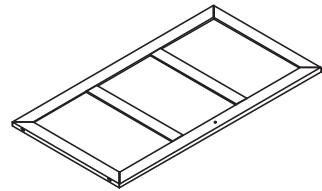

(F2) Hinge Arm x6

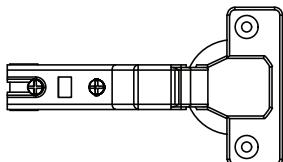

 
(G) Screw (M4x15mm) x12



Phillips Screwdriver
(not included)

15. HANGING THE DOOR PANELS

1. Ask for support to hange the Door Panels.
2. Hold the **Door Panels (13)** in the open position next to the cabinet
3. Align the **Hinge Arms (F2)** with their corresponding **Hinge Plates (F1)**.
4. Snap the **Hinge Arms** onto **Hinge Plates** – you should hear a click.
5. Slowly close the **Door Panels** to check the alignment.

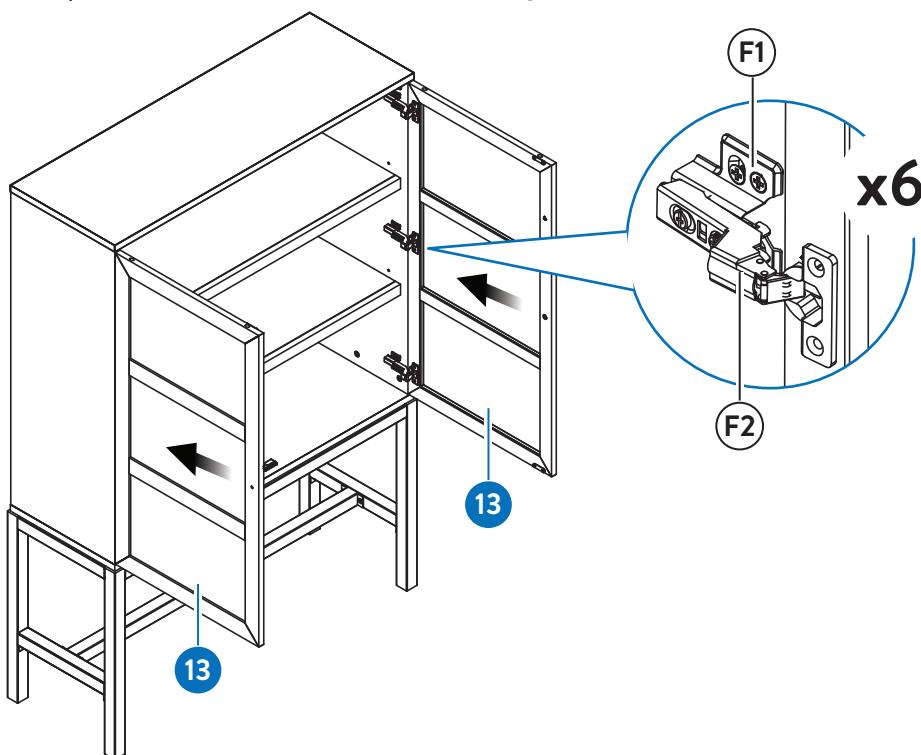

REQUIRED







TWO PERSON





Assembly

16. ADJUSTING DOOR HINGES FOR PERFECT ALIGNMENT





Side-to-Side Adjustments

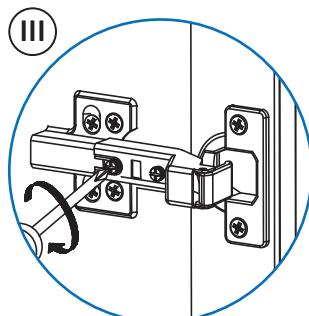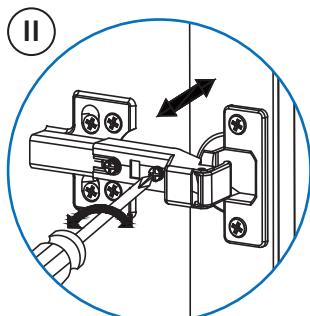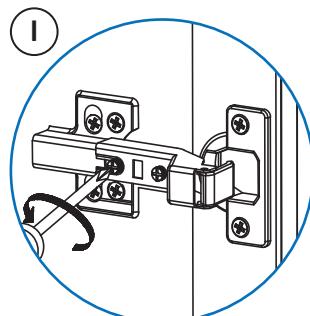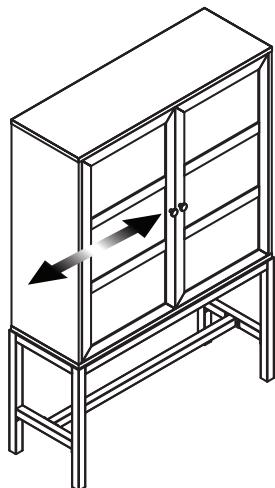

Up-and-Down Adjustments

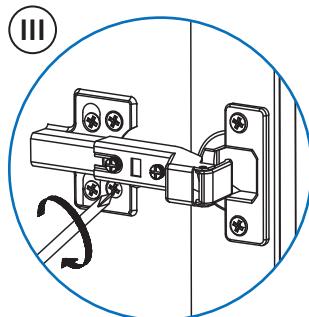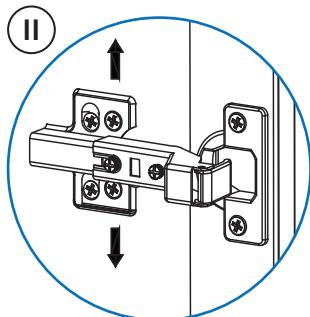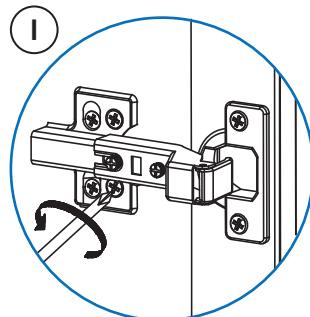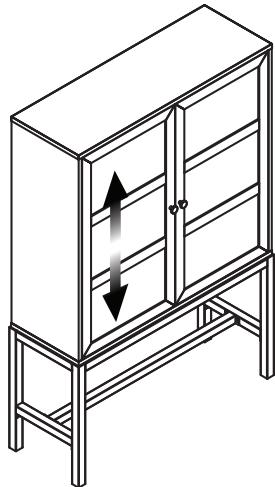


In-and-Out Adjustments

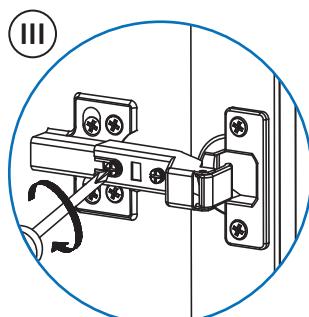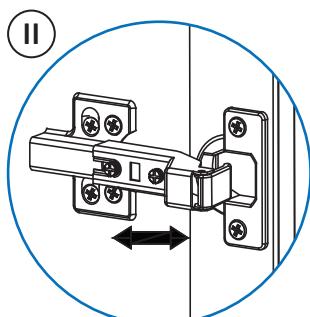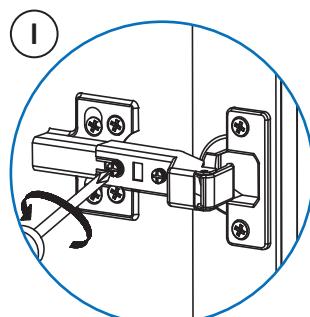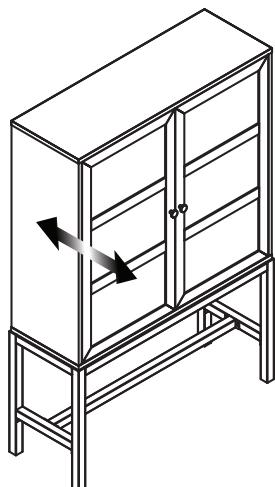

Assembly


17. INSTALLING THE KNOB HANDLES

1. Install the **Knob Handles (K)** to the **Door Panels** with **Bolts (L)**.
2. Tighten the **Bolts** by using the **Phillips Screwdriver**.

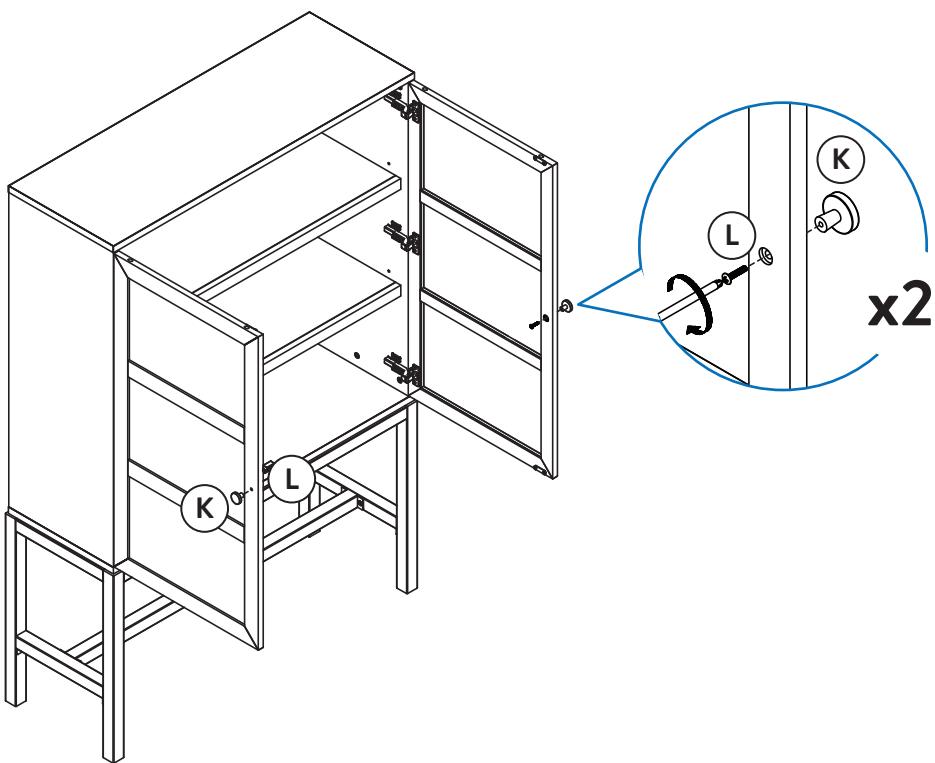

REQUIRED

 
(K) Knob Handle x2



(L) Bolt (M4x20mm) x2




Phillips Screwdriver
(not included)

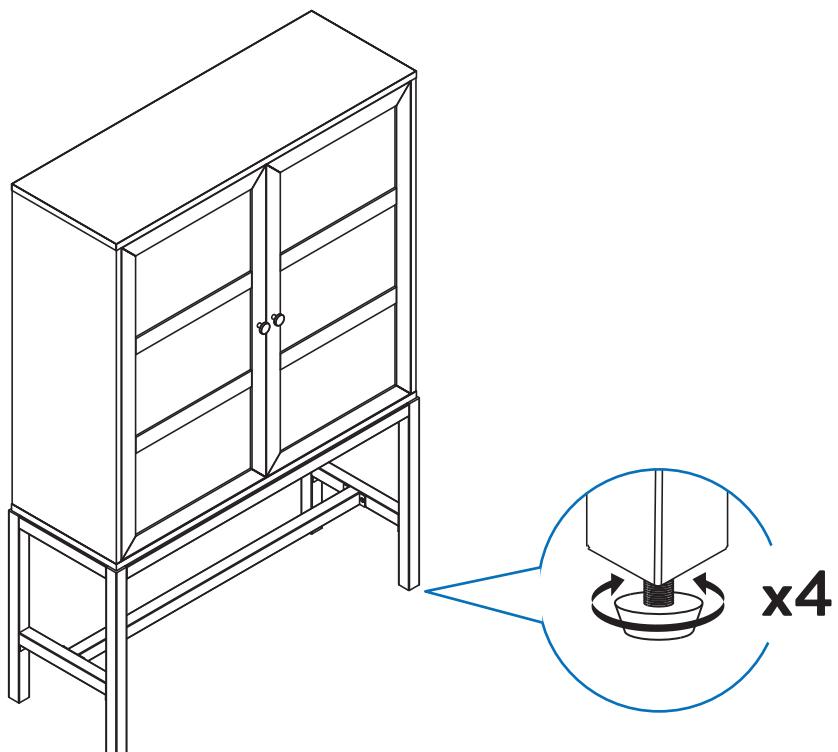


Adjust the balance of the cabinet by adjusting the leveler.

Assembly


18. ANTI-TIP RESTRAINT INSTALLATION

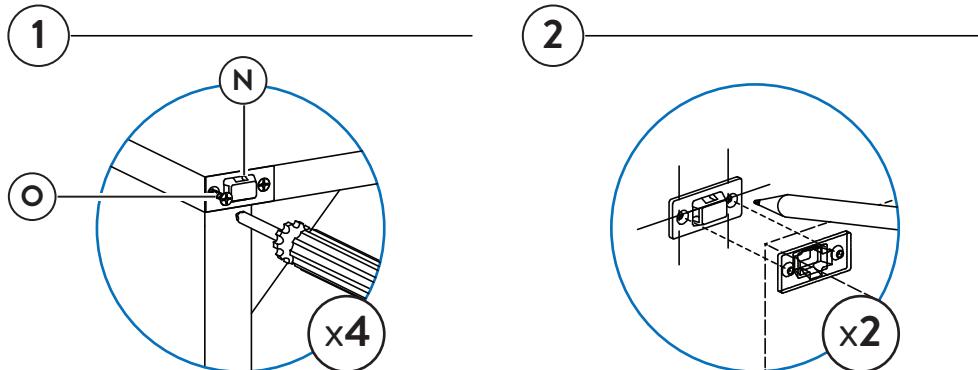

Attach pair of brackets to top corners of the back of the cabinet. Note there are no existing pilot holes on the product.

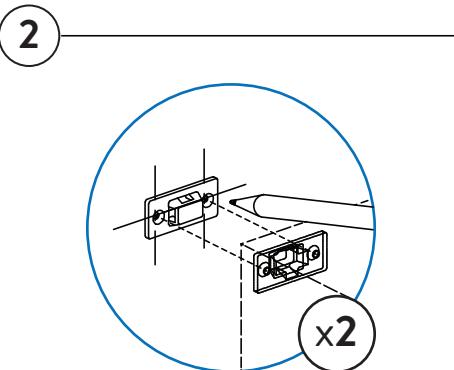


Mark on wall where second pair of brackets should be placed.

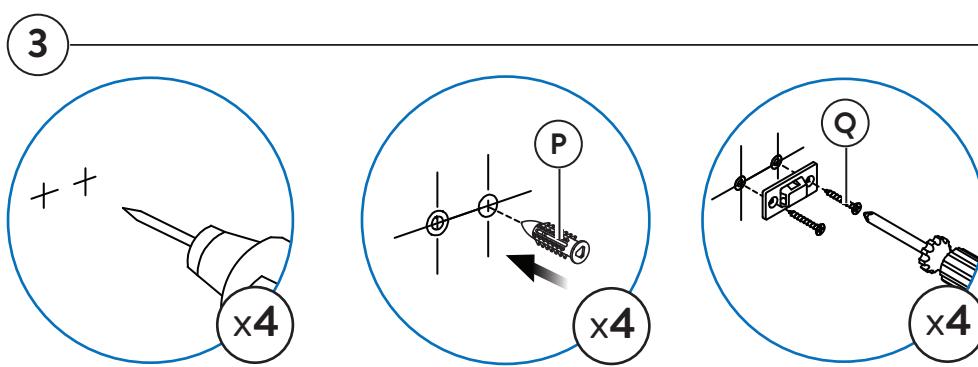


Drill holes in wall using 8mm / 5/16" drill bit.

REQUIRED
(N) Bracket x4
(O) Screw (M4x20mm) x4
(P) Wall Plug x4
(Q) Screw (M4x40mm) x4
(R) Safety strap x2
8mm / 5/16" Drill Bit Electric Drill (not included)
Phillips Screwdriver (not included)

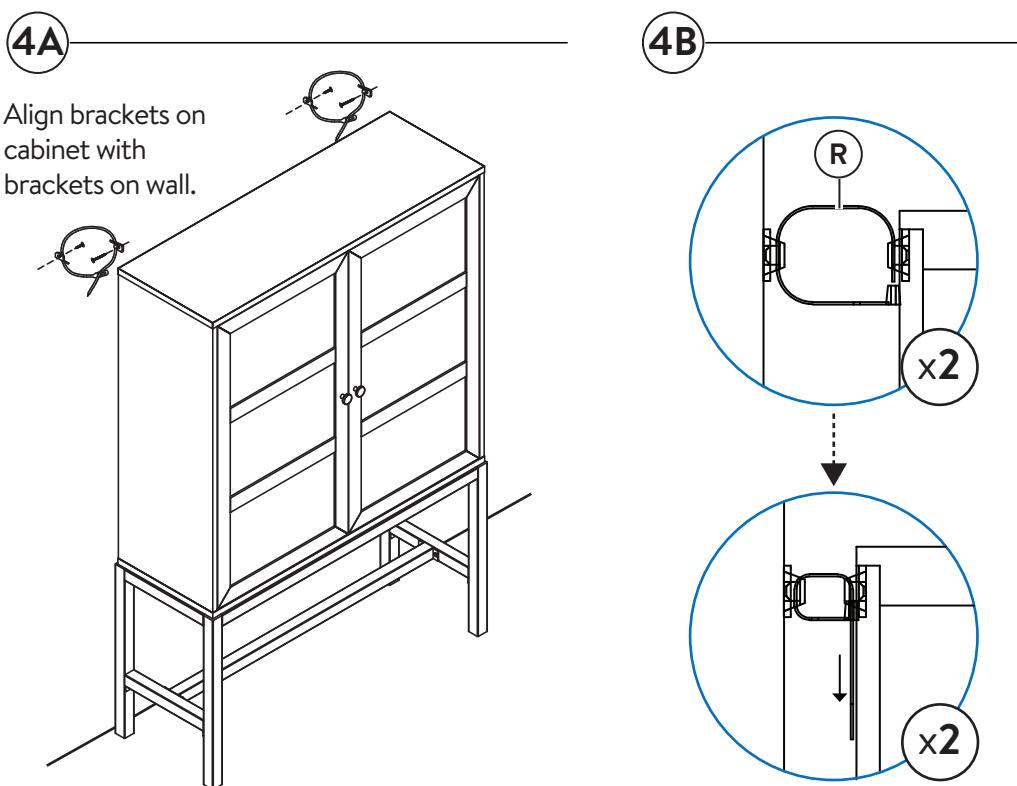

WARNING!

To reduce the risk of furniture tipover:
ALWAYS install tipover restraint kit provided.

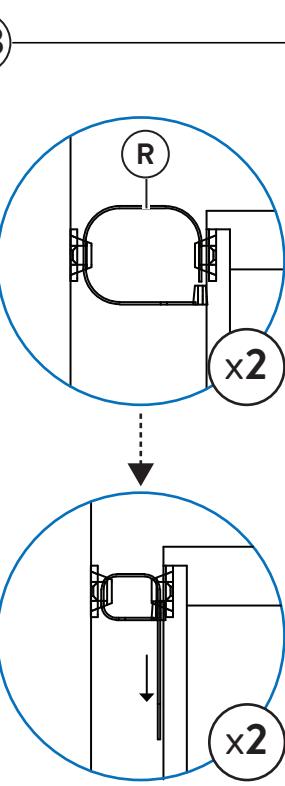

Pull safety strap down until it snap-locks.

Cleaning & Care

CLEANING

- Clean the product with your favorite furniture polish and a soft cloth.
- Do not use harsh chemicals or abrasive cleaners.

CARE

WARNING !:

Children have died from furniture tipover. To reduce the risk of furniture tipover:



- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on doors, or shelves.
- Place heaviest items in the lower shelves.

Warranty

1 YEAR LIMITED WARRANTY COVERING DEFECTIVE PARTS


Contact Manufacturer for Additional Information

- Should this product be defective in workmanship, materials or fail under normal use, we will send replacement parts for up to one (1) year from the date of purchase.
- The Furniture product is designed to meet your highest expectations.
- This warranty gives you specific legal rights and you may also have other rights which vary from State to State.
- The warranty applies to Walmart customer who purchased the product from Walmart stores or Walmart.com with proof of purchase only.
- If you have any question regarding assembly, please call our toll-free number for assistance.
DO NOT RETURN THE PRODUCT TO THE STORE, individual stores do not stock parts.
- If a part is missing or damaged, please call **1-877-637-3590** or send e-mail to **asprod2015@gmail.com** and have your instructions, parts list ready to provide the model name, part name.
- Parts will be shipped FREE of charge within 90 days of the purchase with proof of purchase.
- Additional parts are available for a fee.

Specifications

Product Description : Better Homes & Gardens Ezra China Cabinet

Product Size :

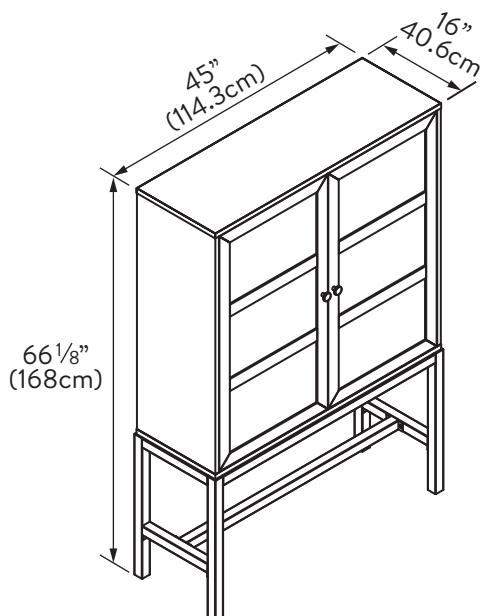

Replacement Parts


Stock #: BH2502125171001 (Light Honey)
 BH2502125171002 (Black)

IF YOU NEED TO ORDER ANY PARTS PLEASE USE THE LIST BELOW.

Please email defect photos and proof of purchase to asprod2015@gmail.com

Parts will be shipped FREE of charge within 90 days of the purchase with proof of purchase.

Spare parts and services only support the purchase made from Walmart Store or Walmart.com

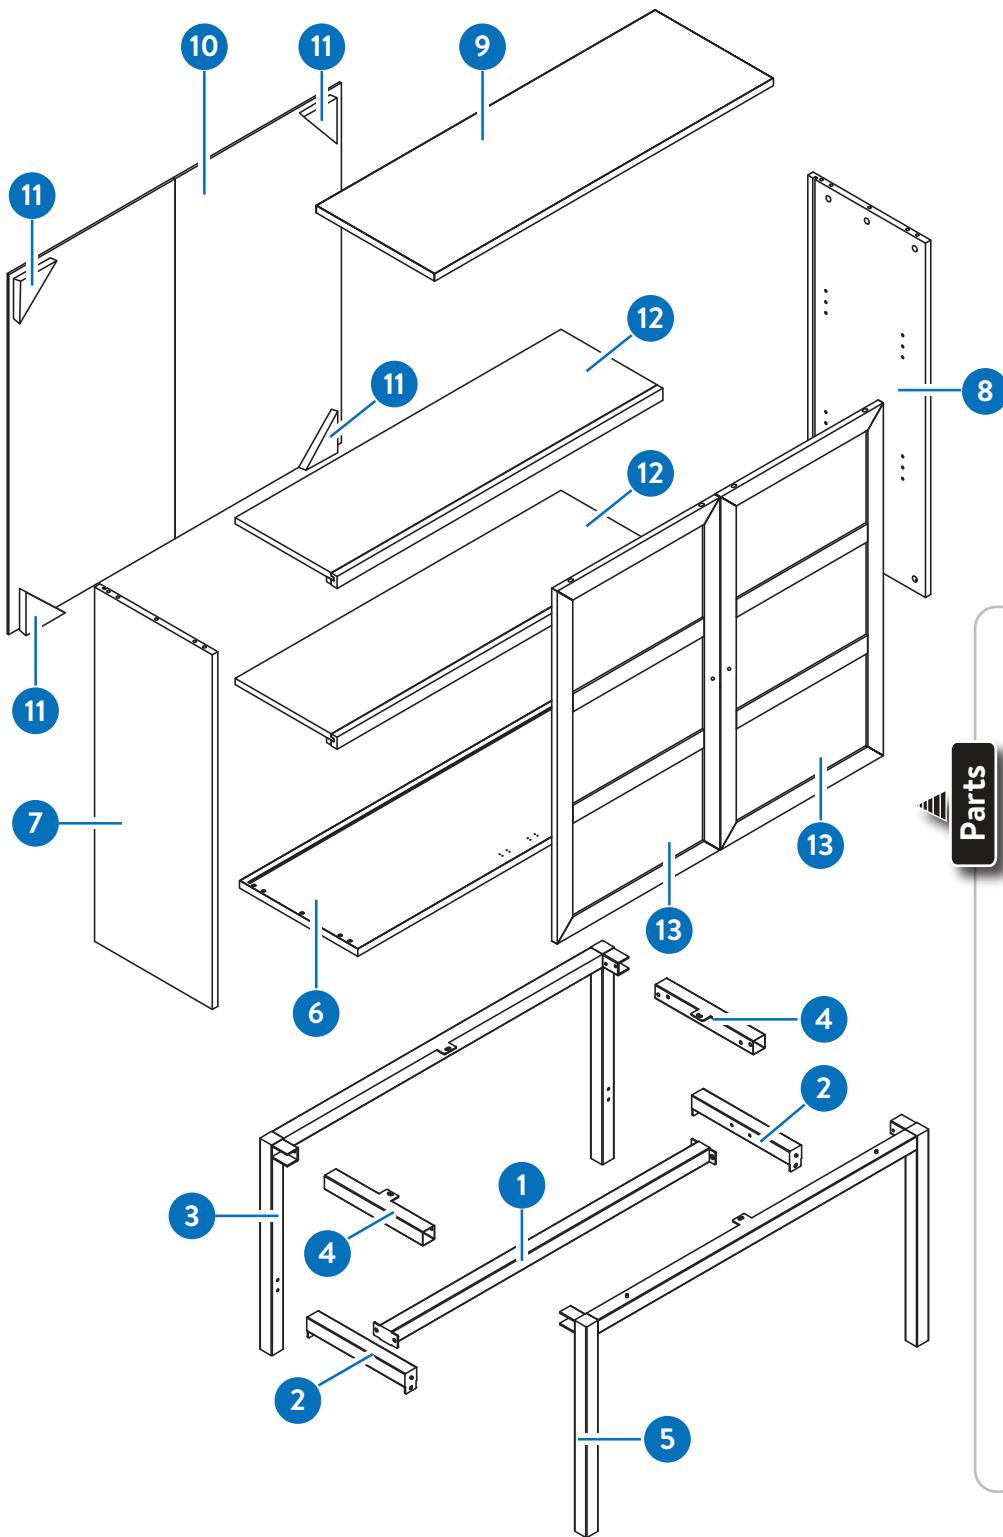

Parts

- 1 Stretcher
- 2 Lower Side Rail
- 3 Back Base Frame
- 4 Upper Side Rail
- 5 Front Base Frame
- 6 Bottom Panel
- 7 Left Side Panel
- 8 Right Side Panel
- 9 Top Panel
- 10 Back Panel
- 11 Corner Block
- 12 Removable Shelf
- 13 Door Panel

Replacement Parts


Stock #: BH2502125171001 (Light Honey)
 BH2502125171002 (Black)

IF YOU NEED TO ORDER ANY PARTS PLEASE USE THE LIST BELOW.

Please email defect photos and proof of purchase to asprod2015@gmail.com

Parts will be shipped FREE of charge within 90 days of the purchase with proof of purchase.

Spare parts and services only support the purchase made from Walmart Store or Walmart.com

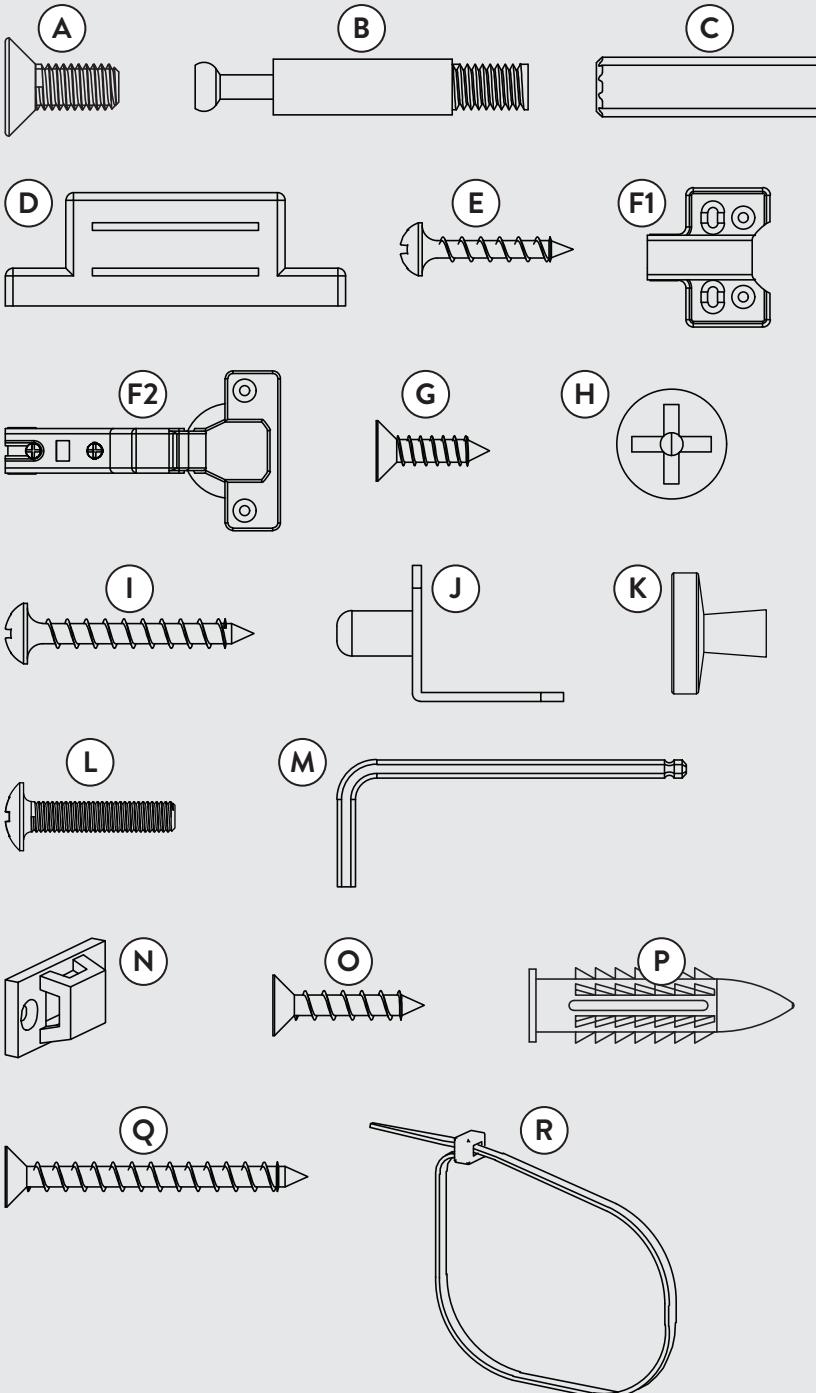

Hardware

- (A) Bolt (M6x15mm)
- (B) Cam Lock Pin
- (C) Wood Dowel
- (D) Magnetic Door Lock
- (E) Screw (M3.5x20mm)
- (F1) Hinge Plate
- (F2) Hinge Arm
- (G) Screw (M4x15mm)
- (H) Cam Lock Nut
- (I) Screw (M4x30mm)
- (J) Shelf Support
- (K) Knob Handle
- (L) Bolt (M4x20mm)
- (M) M4 Allen Wrench
- (N) Bracket
- (O) Screw (M4x20mm)
- (P) Wall Plug
- (Q) Screw (M4x40mm)
- (R) Safety Strap

**Better Homes
& Gardens®**

Manufactured in Vietnam for Walmart Inc.